


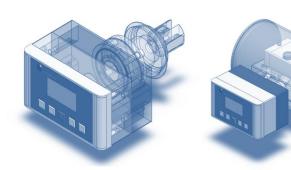

The Centec Group

Centec is a privately owned group of companies. From conventional power plants to solar energy and biofuel – there is a broad range of applications for our automated process skids. We are a leading supplier of water purification and deaeration technologies. Automated CIP-systems designed and manufactured by Centec are installed around the globe Centec technology includes a range of high precision process sensors for accurately measuring critical product properties such as the concentration of acidic and caustic solutions and O_2 content. The largest energy groups in the world and numerous power plants are among our key customers.



Accuracy. Reliability. Centec.

Germany

Centec GmbH Wilhelm-Röntgen-Strasse 10 63477 Maintal Tel.: +49 6181 18 78 0 Fax: +49 6181 18 78 50 info@centec.de

Czech Republic

Centec automatika s.r.o. Pekařská 8/601 155 00 Praha 5 Tel.: +420 257 084 111 Fax: +420 235 518 701 prodej@centec.cz

USA

Centec LLC
P. O. Box 820
Germantown, WI 53022-0820
Tel.: +1 262 251 8209
Fax: +1 262 251 8376
info@centec-usa.com

UK

Centec UK Stalworths, The Street Great Tey, Colchester, Essex, CO6 1JS Tel.: +44 1206 21 19 21 Fax: +44 1206 21 19 16 info@centec-uk.com

Serbia

Centec Serbia
Bogdana Žerajića 34/III
11000 Beograd
Tel.: + 381 11 358 11 24
Fax: + 381 11 358 11 24
info@centec.rs

India

Centec RRR Systems & Sensors Pvt Ltd RRR House, Plot 80, Sector 23 Turbhe Naka, Navi Mumbai - 400 705 Tel.: +91 22 2783 3655 & 2783 1348 Fax: +91 22 2783 4814 mail@centecrrr.com


Brazil

Centec América Latina Ltda
Rua Mexico 148 conj. 1004 Centro
20031 142 Rio de Janeiro
Tel.: +55 21 2223 2066
centeclatina@terra.com.br



Vacuum Deaeration

Centec Energy Systems

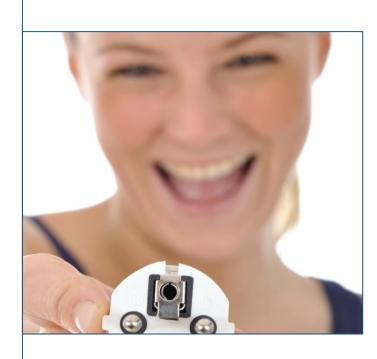

Automated
process skids
and high precision
sensors from a
single source.
Centec.

VeGaS


The Principle

The Centec vacuum deaeration system VeGaS is a modular skid using a vacuum vessel for the removal of oxygen and other gases from a wide range of liquids. The presence of even low oxygen levels can cause serious corrosion damage by attaching to metal piping and other metallic equipment and forming oxides. Through special dispersion nozzles the liquid is sprayed into a continuously evacuated vessel. Due to the distribution of the fine liquid droplets, the transfer surface area between the liquid and the vacuum is maximized. The large partial pressure difference of O_2 forces the oxygen out of the liquid into the vacuum. This fundamental scientific principle is described by "Henry's Law". Once the oxygen has been removed, it transfers out of the vessel through the vacuum line. The deaerated product collects at the bottom of the tank from where it is discharged for further processing. Vacuum deaeration can be assisted by a strip gas like nitrogen or carbon dioxide. O_2 content monitoring with highly accurate OXYTRANS optical sensing technology developed and manufactured by Centec can be added, as can various other options.

Technical Data

Capacity	2 - 180 t/h
Residual Oxygen	< 10 ppb
Pressure of Operation	0 - 8 bar
Temperature of Operation	2 - 85 °C
Material	1.4301/1.4404 AISI 304/316L
PLC	SIMATIC S7
Options	in -line O_2 measurement pre-filtration disinfection





- Modular Design with Standard PLC
 skid mounted for easy installation and start-up
 sturdy execution and customized design of vessel
- Hygienic Execution and Full CIP Capability
- Outstanding Price-Performance-Ratio

Experience. Expertise. Centec.

Particle Pre-Filtration · Disinfection · Water Softening & Demineralization · Ultrafiltration · Reverse Osmosis

Electro Deionization · WFI Distillation · Membrane Deaeration · Column Deaeration · Vacuum Deaeration

Multi Component Mixing · Additive Dosing · Flash Pasteurization · Cleaning-in-Place · Pure Steam Generation





